


Operating Screen (OCU)

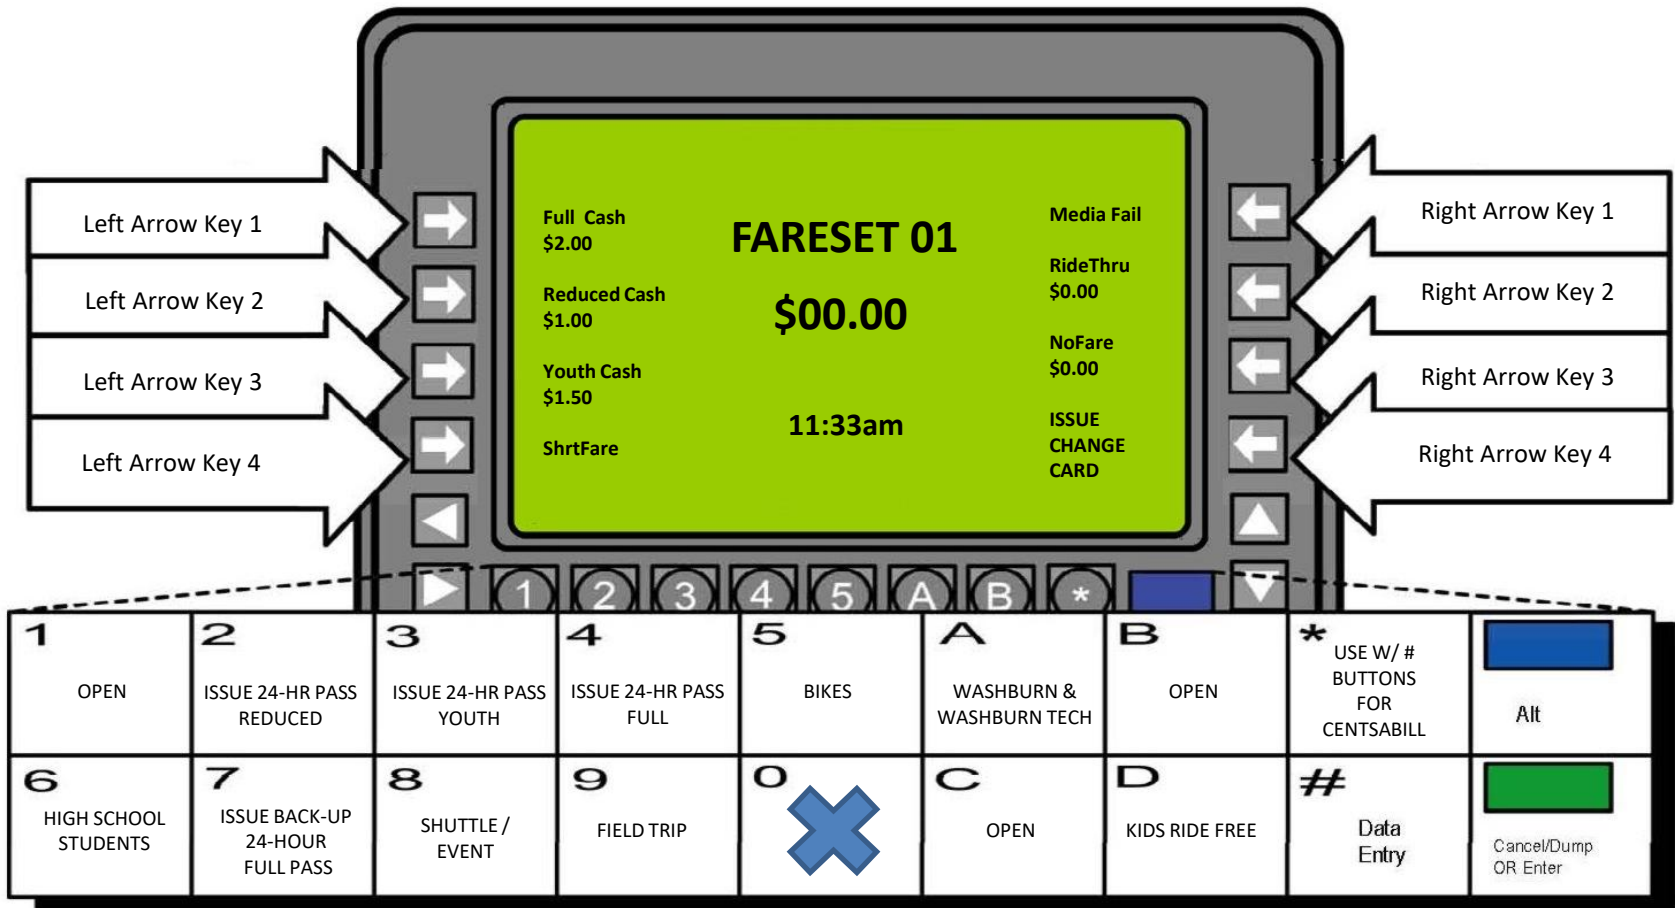

CENTSABILL SOFTKEYS	* + 1	* + 2	* + 3	* + 4	* + 5
	FULL CASH	REDUCED CASH	YOUTH CASH	SHRTFARE	MEDIA FAIL
	* + 6	* + 7	* + 8	* + 9	
	BIKES	NO FARE	(OPEN)	(OPEN)	

NOTES:

*There are 30 total fare buttons that can be assigned (8 arrows, 1-9, A-D, and * + 1-9). The 0, #, and green buttons cannot be used as an assigned fare button.*

The Centsabill trim units do NOT issue change cards, but DO issue 24-hour passes and free ride cards.